

Flush the Ink Delivery System:

With the OEM or other ink cartridges installed, and the printer in a 'Ready' state, proceed as follows:

1. Raise the ink levers and remove all cartridges.
2. Lower ink levers (without carts installed) and press the **Power** button. (The Power button is the far-left button on the panel of six small gray buttons below the lower LCD display on the printer).
3. The printer will now begin the discharging process and may ask you to raise and lower the (light blue) levers a few times. Just follow the instructions displayed on the printer's liquid crystal display (LCD) panel.
4. When the discharge is finished, the printer will power off automatically.

Charge Your Printer with Cleaning Solution:

1. Power the printer back on, raise the light-blue ink levers, and install the eight **cleaning cartridges**.
2. Lower the levers and follow the instructions displayed on the LCD panel to raise or lower levers.
3. You will see the printer counting in percentages. Once this count reaches 100%, the charge is complete.

Perform Two Power Cleanings with the Cleaning Cartridges Installed:

1. Once the printer goes back to the 'Ready' state, Press the *Menu* button (the far right button below the LCD).
2. Press the Up arrow button 4 times, until the LCD displays MAINTENANCE, then press the Menu button.
3. Press the Up arrow button two more times, until the LCD displays PWR CLEANING, then press *Menu*.
4. The LCD display will read, CLEANING? N/Y. Press *Menu* for Yes.
5. The Power Cleaning Process will begin. You will have to raise and lower the ink levers at regular intervals, but the printer will prompt you. Just keep an eye on the LCD panel display.
6. Perform this Power Cleaning procedure **twice**, and then discharge the cleaning solution.

Discharge the Cleaning Solution:

1. Raise the ink levers and remove the cleaning cartridges.
2. Lower the ink levers (without carts installed) and press the **Power** button (to turn the printer off).
3. The printer will now begin the discharging process and may ask you to raise and lower the levers a few times.
4. Follow the instructions displayed on the LCD panel. When the printer powers off, the discharge is complete.

Charge your Printer with the New Ink:

1. Turn the printer on, raise the ink levers and install the new ink cartridges.
2. Lower the levers and follow the instructions on the LCD to raise and lower the ink levers.
3. You will see the printer counting in percentages. Once the LCD display reads 100%, the charge is complete.
4. You are now ready to print with your new inks.

****Maintenance Tank****

If at any time you receive a message, 'MNT TNK FL', you will need to replace the maintenance tank on the printer. Therefore, before beginning a discharge and recharge cycle, be sure you have a spare maintenance tank available.